

# SHARP



**54DS-03S**  
**63DS-03S**  
**70DS-03S**

FARBFERNSEHGERÄT  
TELEVISEUR COULEUR  
KLEURENTELEVISIE  
TELEVISORE A COLORI  
COLOUR TELEVISION

BEDIENUNGSANLEITUNG  
MODE D'EMPLOI  
BEDIENINGSHANDLEIDING  
MANUALE D'USO  
OPERATION MANUAL


DEUTSCH

FRANÇAIS

NEDERLANDS

ITALIANO

ENGLISH

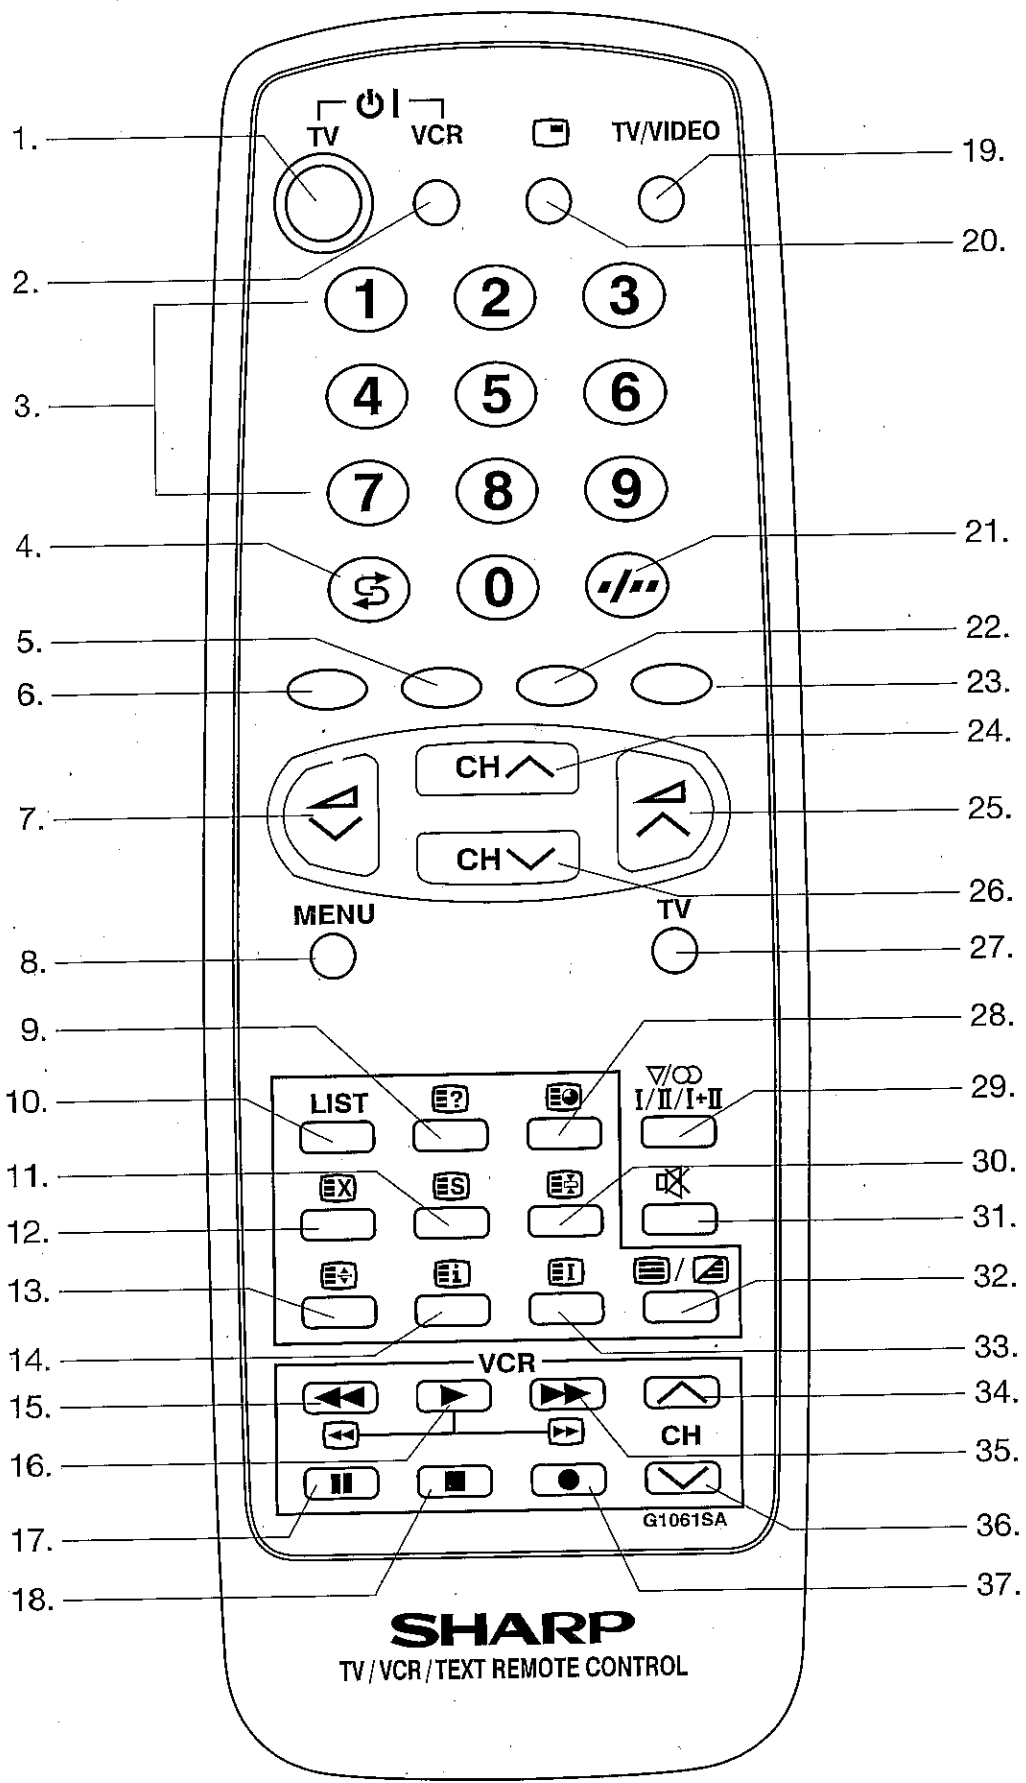

**SHARP**  
 TV/VCR/TEXT REMOTE CONTROL

## Contents

Safety precaution.....	105	Menu Structures.....	115
Feature List.....	105	Picture Adjustments.....	116
Accessoires.....	106	Features Setting Mode.....	118
Remote Control Battery Installation.....	106	Teletext Mode.....	124
Antenna Connection.....	106	21-pin Euro-SCART and 21-pin	
Controls & Terminals.....	108	Audio/Video.....	127
Auto Installation.....	109	Typical connections.....	128
Switching on.....	111	Troubleshooting.....	129
Operation TV.....	112	General Specifications for Television Receiver.....	130
Audio Adjustments.....	113		

## Dear SHARP Customers


Since 1924, «SHARP» consumer electronic products have established a worldwide reputation for unsurpassed quality and precision manufacturing techniques.

Your new SHARP Colour TV uses the very latest electronic circuitry and engineering advancements for the best possible performance. Given proper care, your new TV will provide many years of entertaining for the entire family.

Please read the following instructions before operating this set.

## Safety precaution

This equipment complies with the requirements of Directives 89/336/EEC as amended by 93/68/EEC.


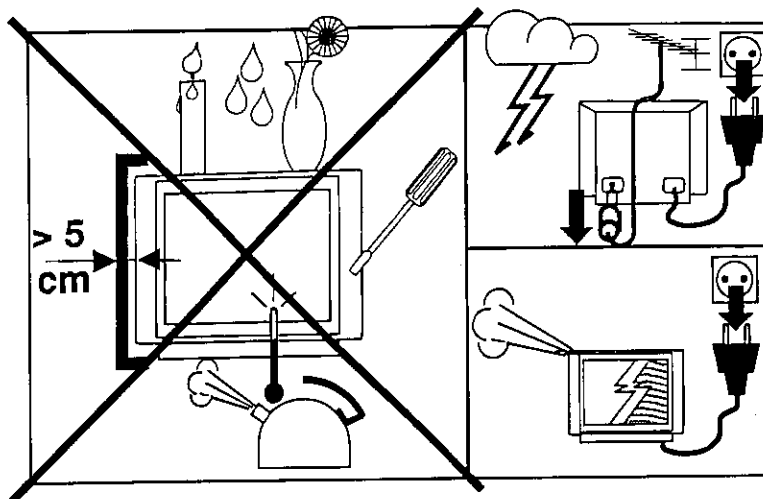


## Feature list


- Auto Installation System
- ASS function (Auto Channel Sorting System)
- 99 Channel Programming System
- Cable and Hyperband
- Multi Teletext
- OSD System (On Screen Display)
- Tint Control
- Stereo (IGR)
- ON-OFF Timer
- 21 pin Euro SCART Connector (RGB)
- 21 pin Audio/Video Connector (AV-1)
- Headphone Terminal
- Blue Back Noise Mute Function

## Quick reference Guide
  
### Accessories




### Remote Control Battery Installation

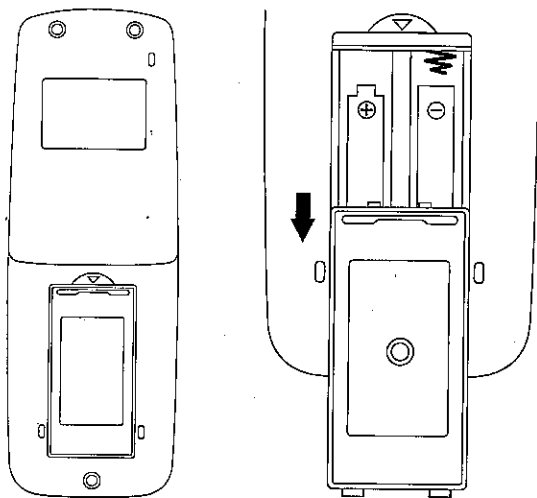

#### Installing the Batteries


1. Remove the cover and insert two «AAA» or «UM-3» 1.5 V batteries as illustrated.
2. Position the positive and negative ends of the batteries as indicated.

### Antenna connections

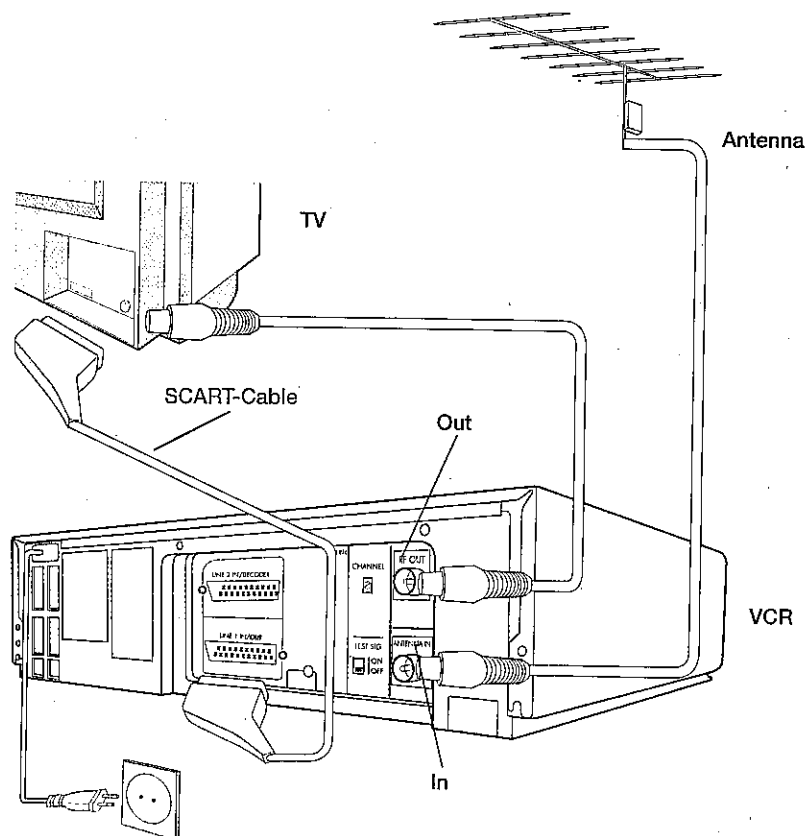

Note: See page 128 for details of further connection possibilities.

# Remote control

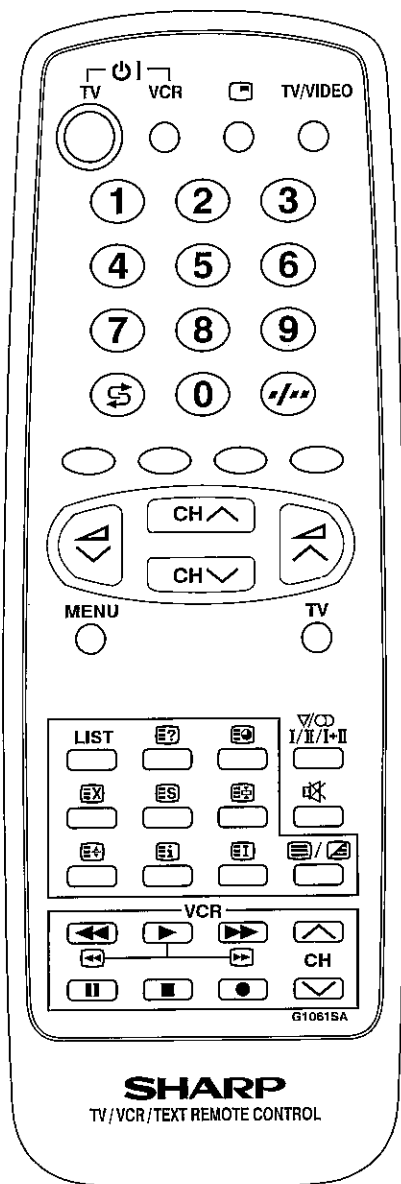


- TV
  - 1. Stand-by ON/OFF switch
  - 2. Power ON/OFF switch (VCR)
  - 3. Digit buttons 0-9
  - 4. Flashback button
  - 5. Colour button (green)
  - 6. Colour button (red)
  - 7. Volume down/Cursor control left
  - 8. Menu button
- Teletext
  - 9. Reveal button
  - 10. List selector
  - 11. Store button
  - 12. Cancel button
  - 13. Top/Bottom/Full button
  - 14. Reset button
- Videorec.
  - 15. Rewind/picture search/reverse
  - 16. Play button
  - 17. Pause/Still button
  - 18. Stop button
- TV
  - 19. TV/VIDEO selector
  - 20. Channel Call button
  - 21. Single/Double entry
  - 22. Colour button (yellow)
  - 23. Colour button (cyan)
  - 24. Channel up/Cursor control up
  - 25. Volume up/Cursor control right
  - 26. Channel down/Cursor control down
  - 27. TV button
- Teletext
  - 28. Time button
  - 29. Sound mode selector
  - 30. Hold button
  - 31. Sound Mute button
  - 32. Text/Mix button
  - 33. Index button
- Videorec.
  - 34. Channel up selector
  - 35. Fast forward/picture search/forward
  - 36. Channel down selector
  - 37. Record button

# Controls & Terminals


**FRONT TV**

- 1. Main Power On/Off Switch
- 2. Power Indicator
- 3. Program Selector (Up/Down)
- 4. Volume Buttons (Up/Down)
- 5. Remote Control Sensor
- 6. Sound Indicator
- 7. DOOR

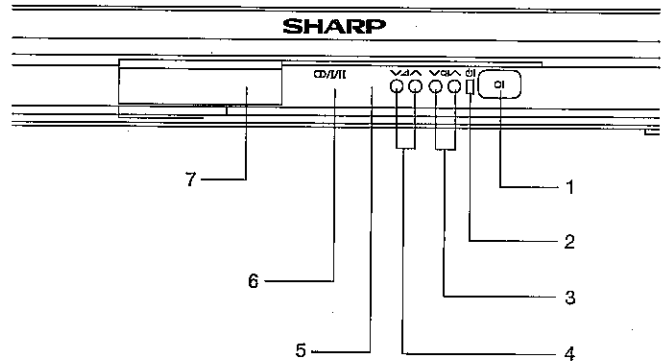

**Behind the door**

- 8. Headphone Socket (16 - 600 Ω) , 3,5 mm. Ø Jack plug

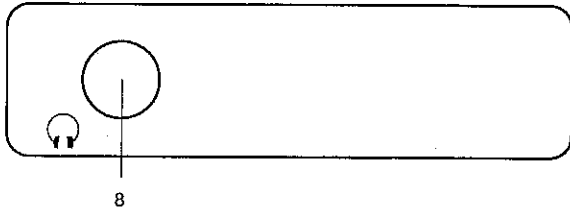

**HOW TO OPEN THE DOOR**

Put your finger in the depression and pull toward you to open.




**REAR TV**

**RF Input**

- 1. Antenna terminal

**21-pin In/Out**

- 2. 21-pin Euro SCART (RGB)
- 3. 21-pin Audio/Video (AV-1)

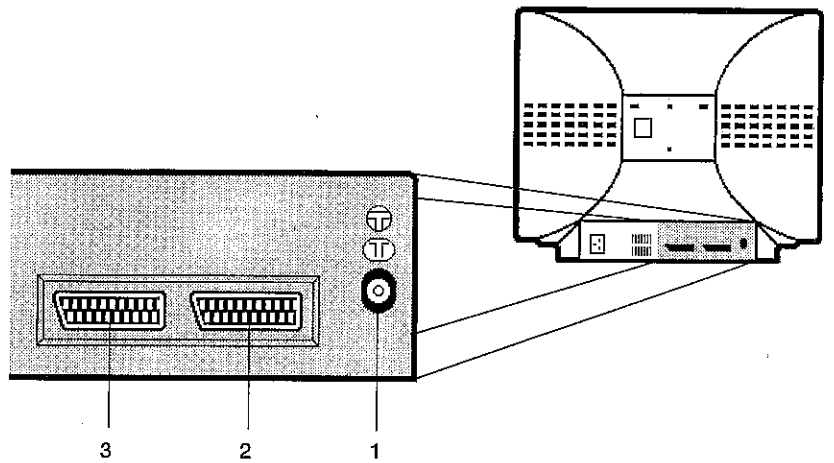


# Auto Installation

## Auto Installation System

Your television set is provided with an Automatic Installation system which makes Installation easier.

This new system is activated when you turn on the TV for the first time.

### Procedure:

1. Connect the antenna jack in the antenna input terminal on the rear side of your TV-set. Then connect the TV power cable to a 220 ~ 240V system.
2. Press the main power button , on the right hand side of the TV set, and the AUTO INSTALLATION message will appear on the screen.
3. Put batteries into the remote control and follow the instructions on the screen.

The TV will go through the following steps Automatically and sequentially:

**Lingua:** To select the language of the menus: ENGLISH (ENGLISH), DEUTSCH (GERMAN), NEDERLANDS (DUTCH), FRANÇAIS (FRENCH), ITALIANO (ITALIAN), ESPAÑOL (SPANISH), DANSK (DANISH) SVENSKA (SWEDISH), NORSK (NORWEGIAN), SUOMI (FINNISH), PORTUGUÊS (PORTUGUESE).

**Country:** To select the country.

**Automatic Channel Sorting System (ASS):** The TV set SEARCHES FOR FREQUENCIES, memorises the channels found, and sorts them (according to technical criteria) from Pr-01 of the TV, to a maximum of 99 programmes.

**Editing:** When the AUTOMATIC SEARCH has been completed, the list of memorised programmes appears. In this menu, you can change the order of the channels and change or give the channels a four letter name.




**NOTE:** You may not have to follow this procedure if it has already been done for you at the establishment where you purchased your TV. If this is the case go on to the section entitled «Switching ON». If you need to repeat the AUTO INSTALLATION, read on.

## Stored programmes

When the TV has finished the automatic search, the «Stored programmes» menu will appear on screen with a list of the channels which have been memorised and a picture of the remote control with the available options:

- a) Edit this programme → Red colour
- b) Delete this programme → Yellow colour
- c) Go to sorting mode → Green colour
- d) Exit → Blue colour

With this options, you will be able to organise the real channels (CH \*\*) memorised in the TV programmes (Pr 01 ... Pr 40) and put them into your own preferred order.

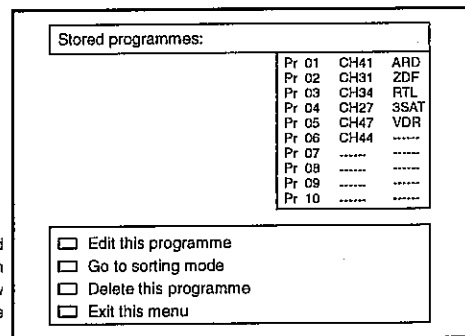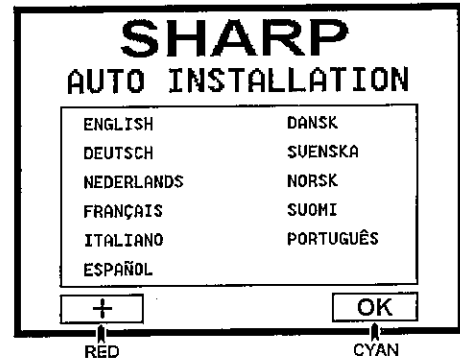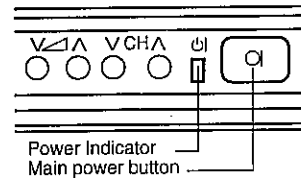

**a) Edit this programme**

Select the programme that you want modify with channels up/down arrows, after that push the red button to edit. Use this option for giving a name made up of four digits to the channels or for changing the one which appears on some channels, in the following way:

- a.1. Select the channel using the Cursor UP/DOWN buttons ▲/▼.
- a.2. Press the RED button.
- a.3. Press the Cursor UP button ▲ to change the first letter. Letters A to Z of the alphabet, a blank space and the numbers 0 to 9 will appear sequentially. Press the Cursor DOWN button ▼ to go backwards in the sequence.
- a.4. Press the ◀/▶ buttons for changing the position of the cursor and the ▲/▼ buttons for changing the letters. When you have finished the fourth letter, press the CYAN button to quit the «CHANGE OF NAME» option.

**b) Delete this programme**

Use this option for cancelling programmes which are badly tuned or repeated. When the YELLOW button is pressed, the TV will ask for confirmation that you wish to cancel, and you must press the YELLOW button again. The channels that follow it on the list will automatically rearrange themselves by moving up one programme (Pr) place, to restore the space of the cancelled channel (CH).

**c) Go to sorting mode**

Use this option for sorting the programmes into the desired programme (Pr). With this option you select the programme selected, can be moved with the arrows ▲/▼ to be selected position.

One time the desired position is reached use again the green button to return to a normal mode.


**d) Exit**


Use this option to quit the menu by pressing the CYAN button.









## Switching on


### Power supply on/off button

When the main power button  is pressed ON, power indicator lights and your TV set enters: In Stand-by mode or Program Mode. This TV memorizes the Mode which has been memorized when it was switched OFF by main power button.

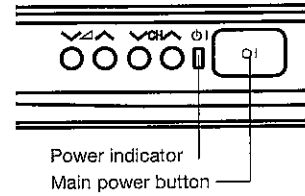

### On-Off/Stand-by button

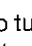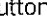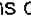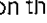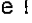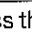When the TV is on Stand-by Mode, to turn ON the TV press the Stand-by button ( TV) of the remote control, or one of the four buttons on the TV (, , , ). The TV will change from Stand-by Mode to Program Mode, the sound indicator will light a few moments and an image will appear on the screen. Press the Stand-by button ( TV) again and the TV will return to Stand-by Mode.

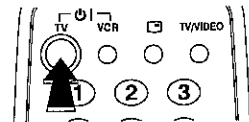

### Blue back off timer

If noise appears in TV or VCR mode, the screen turns blue. The blue back off-timer is then engaged and will automatically switch the set to stand-by mode in 15 minutes.

### Real Channel Number (terrestrial/cable TV Programmes)

Channel setting is mainly performed using the remote control. Please follow the instructions with the remote control in hand.

Television broadcasting stations have channel numbers assigned to them (real channel numbers). You can assign your own channel number to a real channel and store it in the programme channel memory.

Corresponding Real Channel

	Station Signals	Real Channel numbers	Especially Available
V	E-2 ~ E-4	CH 02 ~ CH 04	in Italy
H	E-5 ~ E-12	CH 05 ~ CH 12	
F	A ~ H	CH 13 ~ CH 20	
UHF	E-21 ~ E-69	CH 21 ~ CH 69	
C	M1/S1 ~ M10/S10	CC 01 ~ CC 10	in Holland
	U1/S11 ~ U10/S20	CC 11 ~ CC 20	
A	S21 ~ S41	CC 21 ~ CC 41	
T	M1 ~ M7	CC 42 ~ CC 48	
	B1 ~ B7	CC 49 ~ CC 55	
V	S'1/S21 ~ S'5/S25	CH 75 ~ CH 79	in Switzerland

# Operation (TV)

## Channel Selection

### A Channel selector (V CH ^) buttons

Select the programme channel number you want to see, using the channel selector buttons (CHA/CHA).


When you press these buttons the TV set frozen the actual program, a small screen appears within the main TV screen and the list of programmes appears too.

Press the CHA/CHA again to select another program.

In the small screen you can watch the selected programme.


You can clear the on-screen display by pressing the MENU button.

Note: The channels that are in SKIP mode cannot be seen with this buttons. Use numerical buttons to display these channels.

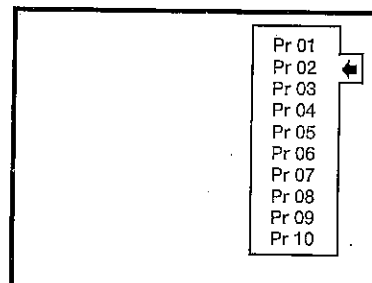

### B Single/Double entry selector (-/--)

This button selects between one or two digit channel number entry.

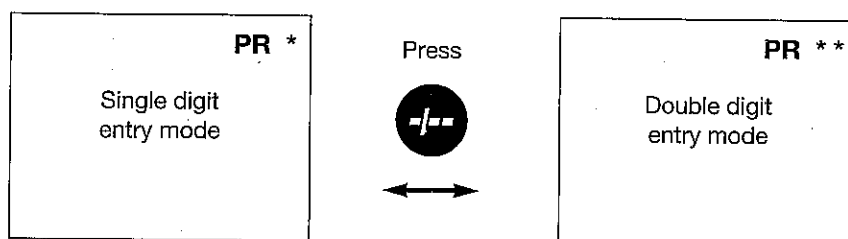

### C 0-9 Digit buttons


You can select channels by pressing the 0-9 digit buttons on the remote control.

(Single digit and double digit entry are available: refer to the Single/Double entry selector).

### D Flashback button (S)

Press this button to switch the currently-tuned channel to the previously-tuned channel. Press the button again to switch back to the currently-tuned channel.

This function is only available in programme channel selection mode.

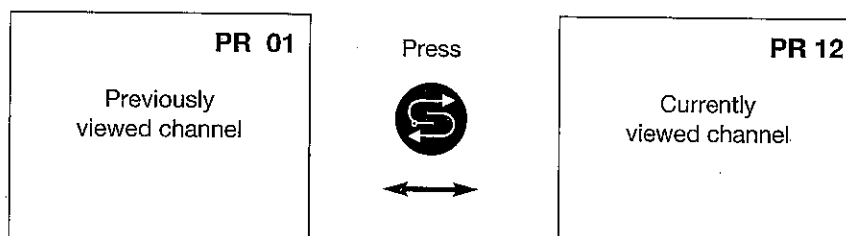


# Audio Adjustments

## (A) Loudspeakers Sound Volume (V ▽ ▲)



Adjust the sound volume using the V ▽ ▲ buttons. Press the buttons to decrease/increase the sound level. The sound volume indicator appears on the screen.

Note: To Adjust the headphones sound volume, see the SOUND LEVELS menu on page 117.

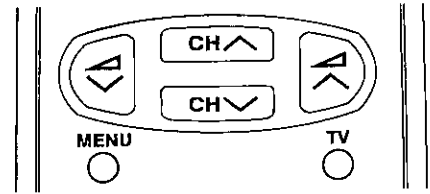

## (B) Sound Mute button


Press the button to mute the sound. MUTE appears on the screen. Press the button again to turn the sound back on.

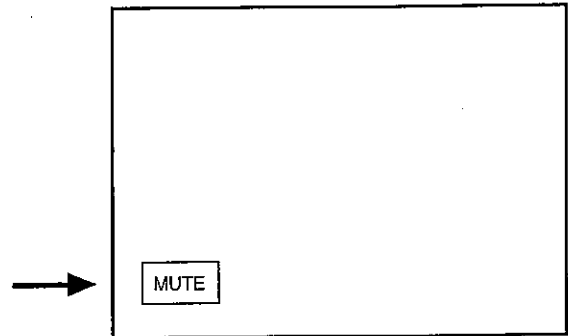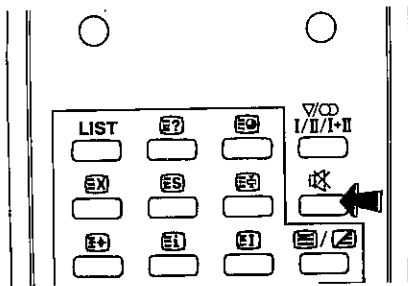

## (C) Sound Mode Selector button (V ▽ I/II/I+II)

You can select a sound mode to the speakers and another sound mode to the headphones.

1. Press the Sound Mode Selector button  $\nabla \square \nabla$  I/II/I+II and the SOUND MODE menu will appear on the screen.
2. Press the Cursor UP/DOWN buttons ▲/▼ to select loudspeakers or headphones.
3. Press the Cursor LEFT/RIGHT buttons ◀/▶ to change the sound mode as indicated:

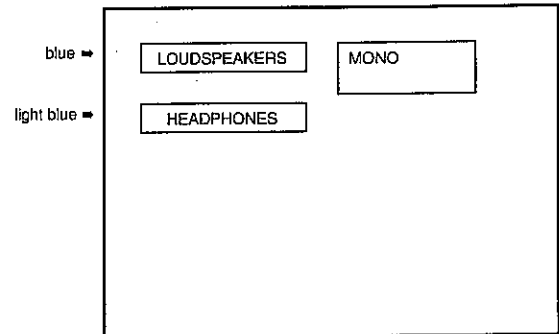

When the TV set is receiving a STEREO programme the TV selects STEREO automatically, and you can change:

In the SPEAKERS: STEREO ↔ SOUND WIDE ↔ MONO

In the HEADPHONES: STEREO ↔ MONO

When the TV is receiving a BILINGUAL programme the TV selects DUAL CHANNEL A automatically, and you can change:

In the SPEAKERS: DUAL CHANNEL A ↔ SIMULATED STEREO A ↔ DUAL CHANNEL B  
MONO ↔ DUAL CHANNELS A B ↔ SIMULATED STEREO B

In the HEADPHONES: DUAL CHANNEL A ↔ DUAL CHANNEL B ↔ DUAL CHANNELS A B ↔ MONO

When the TV is receiving a MONO programme the TV set selects MONO automatically and you can change:

In the SPEAKERS: MONO ↔ SIMULATED STEREO

In the HEADPHONES: only MONO

4. Press the MENU button ● to clear the on-screen display.

**Sound Indicator:** When the TV set is receiving a STEREO or BILINGUAL programme the Sound Indicator lights.

**External source:** When you are watching the TV-set through the Euro-SCART or AV-1 terminals, the Sound Mode Selector button is not operative.

## Other Features


### A TV/Video selector (TV/VIDEO)

The signal source can be selected from each of the input terminals in this mode.

1. Press the TV/VIDEO selector button to see 3 small screen, with images(in STILL mode) corresponding to the input signals.
2. Press the Cursor UP/DOWN ▲ / ▼ buttons to select one signal source: TV, EURO-SCART or AV-1.

The selected signal will appear onscreen in PLAY mode.

3. Press the TV/VIDEO button again to clear the on-screen display.

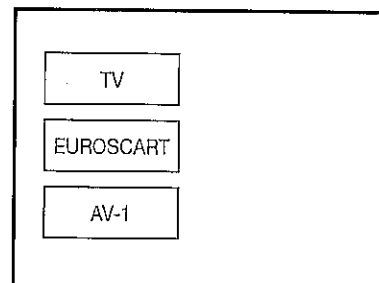

### B Time button (⌚)

Press the button to display the current time on the screen.


Note: that this function operates only if the station you are tuned to broadcasts a teletext signal.

### C Headphone jack

1. Press the MENU button ● to see the MAIN Menu.
2. Press the Cursor DOWN button ▼ twice to select «AUDIO ADJUSTMENTS» (yellow box).
3. Press the MENU button ● to see the SOUND Menu.
4. Press the Cursor RIGHT button ► to open the LEVELS Menu.
5. Press the Cursor DOWN button ▼ twice to select HEADPHONES VOLUME.  
The red point mark indicates the selected parameter.
6. Adjust the sound level with the Cursor LEFT/RIGHT buttons ◀/▶.  
Note: Balance and Equalizer adjustments cannot be set for headphones.
7. Select the symbol ◀◀ and press the Cursor LEFT button ◀ to close the LEVELS Menu.
8. Press the MENU button ● to close the SOUND Menu.

Be sure to insert the headphone plug all the way into the headphone jack.

**Safety:** In order to protect your ears, turn down the volume of the headphones before connecting them.

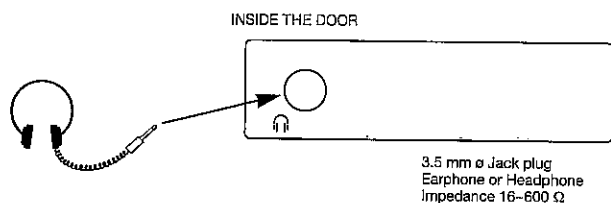

## VCR Mode

SHARP VCR can be operated using this remote control.

### Channel selectors (V CH ^)

These buttons are used for changing channels and setting the timer.

### Play button ►

Press this button to start playback.

### Record buttons ●

Press both buttons simultaneously to start recording. If the video cassette is protected against recording, it will be ejected.

### Stop button ■

Press this button to stop playback or recording.

### Operate button ⏻

Press this button to turn your VCR on.

### Fast forward/picture search forward ►► and Rewind/picture search reverse ◀◀ buttons

Both these buttons have the following function:

#### Fast forwarding and Rewinding

- ① To move through the cassette faster, press the STOP button and then press the ►► or ◀◀ button to fast forward or rewind the cassette.
- ② Press the STOP button to stop fast forward or rewind.

#### Picture Search


- ① During playback, press the ►► button for forward picture search, or the ◀◀ button to reverse search.
- ② Press the PLAY button to resume normal playback.

For further details, please refer to operation manual of your VCR.

# Menu Structures

This TV set has: a MAIN MENU with four basic menus which permit the entrance to the different functions of the TV.

These menus are figured out as indicated below.

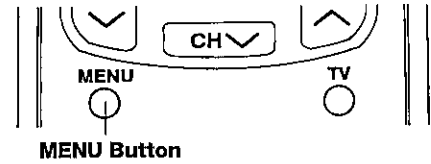


By pressing the **MENU** Button:

MENU	OPTIONS	FUNCTIONS
PICTURE ADJUSTMENTS		CONTRAST / COLOUR / BRIGHTNESS / SHARPNESS / NORMALIZE
		TINT CONTROL
AUDIO ADJUSTMENTS		VOLUME: LOUDSPEAKERS / HEADPHONES
		VOLUME / BASS / TREBLE / BALANCE / NORMALIZE
		LOUDSPEAKERS / HEADPHONES (STEREO / MONO)
SET OTHER FUNCTIONS	LANGUAGE	ENGLISH, DEUTSCH, NEDERLANDS, FRANÇAIS, ITALIANO, ESPAÑOL, DANSK, SVENSKA, NORSK, SUOMI or PORTUGUÉS
	ON TIMER	TIME / SWITCH ON
	OFF TIMER	OFF / 120 Min. / 90 Min. / 60 Min. / 30 Min.
	DEMO	
INSTALL AND TUNE	CHANNEL	
	SEARCH	
	F-TUNE	PROGRAMME CHANNEL NUMBER (Real Channel) CHANNEL TYPE: Aerial / Cable SEARCH (Frequency Tuning) FINE TUNE
	MODE	TV / VCR / SKIP
	EDIT	
	AUTO-TUN	AUTO INSTALLATION

# Picture Adjustments


Picture quality: CONTRAST, COLOUR, BRIGHTNESS, SHARPNESS, TINT CONTROL and NORMALIZE are adjustable in this menu.

1. Press the MENU button ● to see the MAIN Menu.
2. Press the Cursor DOWN button ▼ to select «PICTURE ADJUSTMENTS» (blue box).
3. Press the MENU button ● to see the PICTURE Menu.
4. Press the Cursor UP/DOWN buttons ▲ / ▼ to select an option from the list: CONTRAST, COLOUR, BRIGHTNESS, SHARPNESS or NORMAL.
5. Adjust the picture quality to your liking with the Cursor LEFT/RIGHT buttons ◀ / ▶.

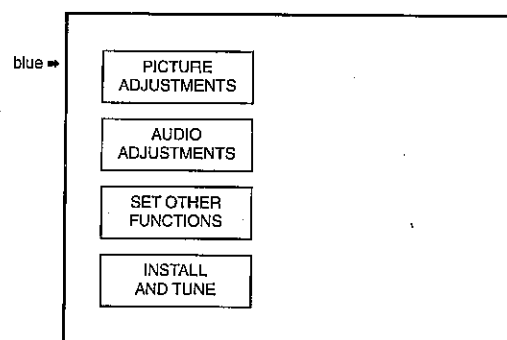


## NORMALIZE menu

- 6.1.a. Press the MENU ● button if you wish to normalize video levels (CONTRAST, COLOUR, BRIGHTNESS, SHARPNESS) to default factory settings.
7. Press the TV button ● to close the PICTURE Menu. Press continuously ▲ / ▼ arrows will appear the:
- 6.2.a. Press the Cursor UP/DOWN buttons ▲ / ▼ to select a parameter from the TINT CONTROL.
- 6.2.b. Press the Cursor LEFT/RIGHT buttons ◀ / ▶ to adjust picture quality to your liking.

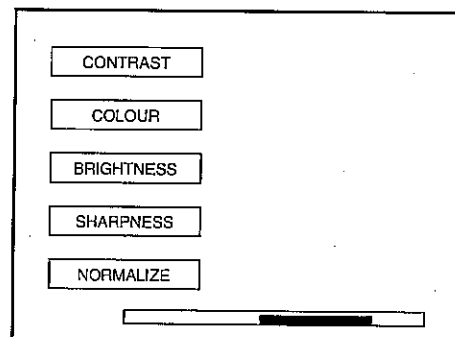


Select **TINT CONTROL** to adjust your desired skin colour (COOL or WARM).

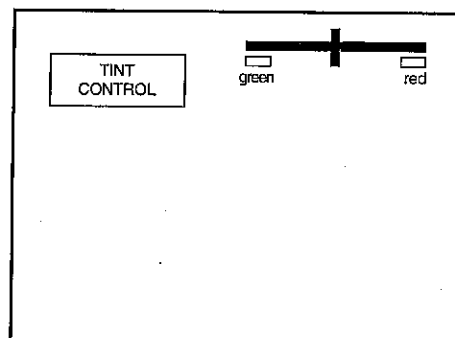

## Sound Setting Mode


Sound quality (MAIN VOLUME, HEADPHONES VOLUME, BALANCE BASS, TREBLE, MODE and NORMALIZE) are adjustable in this mode.

1. Press the MENU button ● to see the MAIN Menu.
2. Press the Cursor DOWN button ▼ to select: AUDIO.
3. Press the MENU button ● to see the SOUND Menu.
4. Press the Cursor UP/DOWN buttons ▲ / ▼ to select an option from the list: VOLUME, BASS, TREBLE, BALANCE, NORMALIZE.
5. Adjust the sound levels with the Cursor LEFT/RIGHT buttons ◀ / ▶.  
Note: Balance cannot set for headphones.

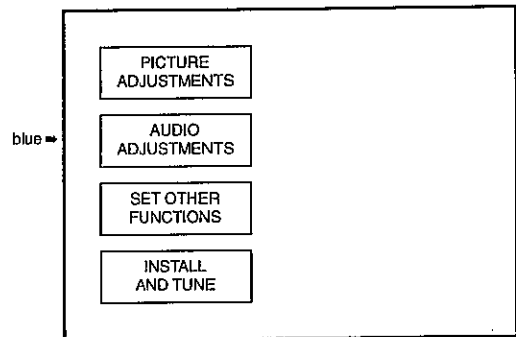

### NORMALIZE


- 6.1. Press the MENU button ● if you wish to normalize audio levels to default factory settings.
7. Press the TV button ● to close the Audio Menu.
- 6.2.a. Press the Cursor UP/DOWN buttons ▲ / ▼ to select: loudspeakers or headphones.
- 6.2.b. Press the Cursor LEFT/RIGHT buttons ◀ / ▶ to change the sound mode, same as indicated on page 23, chapter «Sound Mode Selector button».

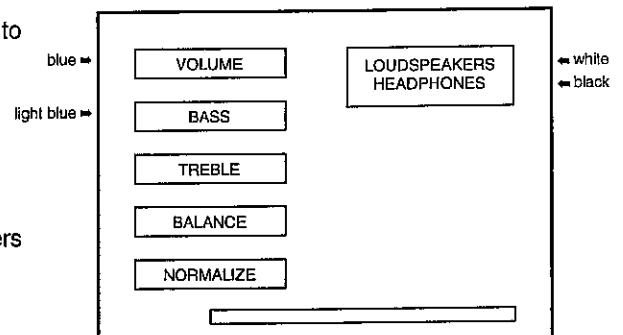

**Sound Indicator:** When the TV set is receiving a STEREO or BILINGUAL programme the sound Indicator lights.

**External source:** When you are watching the TV-set through the Euro-SCART or AV-1, terminals, the Sound MODE menu is not operative.

7. Press the TV button ● to close the SOUND Menu.

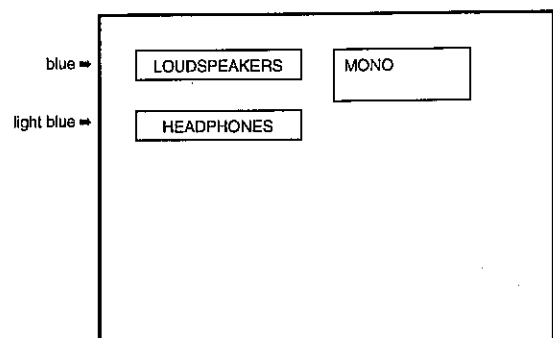

## Features setting mode

In this mode you can select a LANGUAGE for screen menus, set the ON-TIMER an OFF-TIMER, and view the all functions implemented in your TV set demonstration.




1. Press the MENU button ● to see the MAIN Menu.

2. Press the Cursor UP button ▲ to select «SET OTHER FUNCTIONS».

3. Press the MENU button ● to see the FEATURES Menu.

4. Press the Cursor UP/DOWN buttons ▲ / ▼ to select an option from the list:  
LANGUAGE, ON TIMER, OFF TIMER or DEMO.  
The selected item will appear on screen in a blue box.

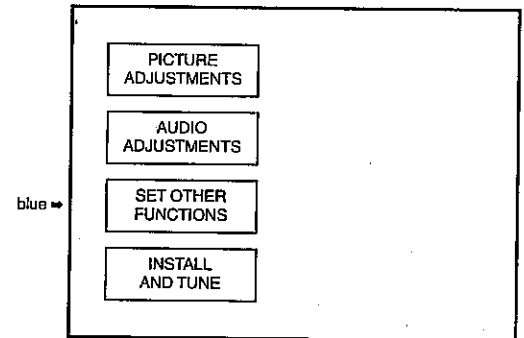


5. Press the Cursor RIGHT button ► to open the menu from the selected item.

### LANGUAGE

6.1.a. Press the Cursor UP/DOWN buttons ▲ / ▼ to select a language from the list:  
ENGLISH (ENGLISH), DEUTSCH (GERMAN), NEDERLANDS (DUTCH), FRANÇAIS (FRENCH), ITALIANO (ITALIAN), ESPAÑOL (SPANISH), DANSK (DANISH), SVENSKA (SWEDISH), NORSK (NORWEGIAN), SUOMI (FINNISH) und PORTUGUÊS (PORTUGUESE); for on-screen menus.

6.1.b. Press the GREEN button ● to memorize it.  
The green symbol indicates the memorized language.

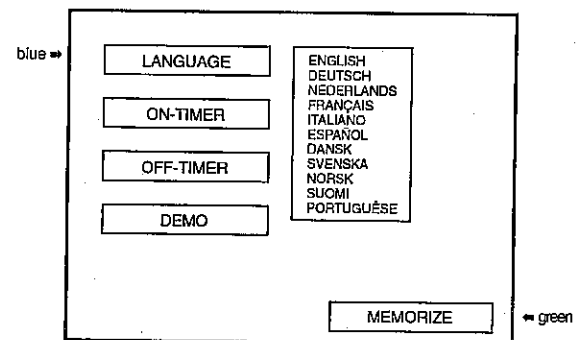

7. Press ▲ / ▼ to change to the next menu item.






## ON TIMER

The On-Timer is used to programme switching on the TV set during the 24 hours of the day.

6.2.a. Pressing the Cursor UP/DOWN buttons ▲ / ▼ , select to adjust the real TIMER or the SWITCH ON.  
The red point mark indicate the selected item.

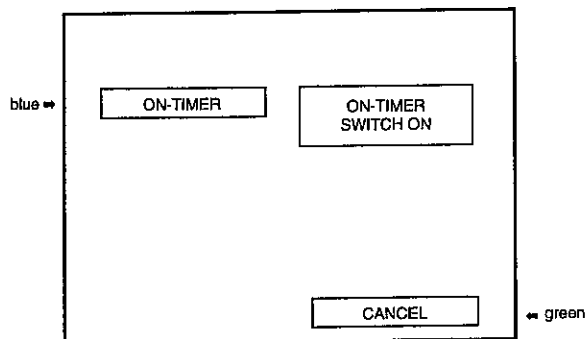6.2.b. To programme the real TIME:  
In order to be able to run this function, it is essential to adjust the real time.



**Automatic TIME adjustment:** If a programme with teletext is being received, the real TIMER can be adjusted automatically with the signal's clock. (To synchronize Real-Timer, press Text/Mix button  / ).

Important: If a signal via satellite is being received, or if correct time cannot be obtained, the time will have to be adjusted manually.

**Manual TIME adjustment:** To adjust the time manually, this should be done with the 0 to 9 digit buttons.

6.2.c. Adjusting the SWITCH ON. Once the real-TIME has been adjusted, the SWITCH ON can be set with the 0 to 9 digit buttons.  
The MENU button ● is used to cancel the SWITCH ON function.

7. Press the TV button ● to close the FEATURES Menu.

8. Press the POWER button to switch on Stand-by Mode.

\* As a safety precaution, in the case of nobody being home when the television switches on automatically, the television will disconnect itself automatically within 120 minutes; if it is to continue to run, any button of the remote control functions should be pressed.

**Note:** In the event of a power cut, disconnection from the plug or television switch, all the data on the ON TIMER will be cancelled.


## OFF TIMER

The OFF TIMER automatically switches the TV set to standby mode after a predetermined period, (30, 60, 90 or 120 minutes).

6.3.a. Pressing the Cursor UP/DOWN buttons ▲ / ▼ , select the desired period. Select OFF to disconnect off-timer. The red point mark indicate the selected item.

6.3.b. Press the MENU button ● to memorize it.

7. Press the TV button ● to close the FEATURES Menu.

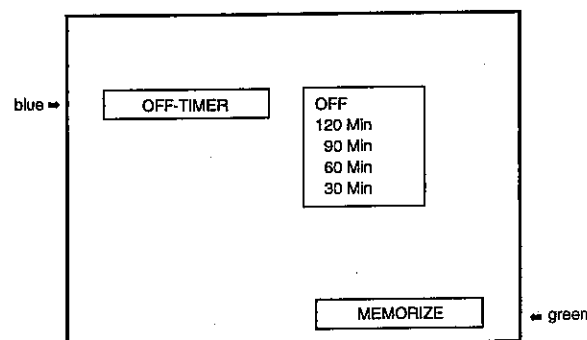


**Note:** The OFF TIMER data will be cancelled if you turn off the TV by the Standby button (POWER) on the remote control or with the Main power button on the TV set.

## Demo


The demonstration function allows you to see all the menus implemented in this TV set.

1. Press the MENU button ● to see the MAIN Menu.
2. Press the Cursor UP button ▲ to select: «SET OTHER FUNCTIONS».
3. Press the MENU button ● to see the FEATURES Menu.
4. Press the Cursor UP button ▲ to select DEMO.
5. Select NORMAL/AIS (Autoinstallation).  
The red point mark indicate the selected item.
6. Press the MENU button ● to begin the demonstration.
7. Press any button on remote control to exit this function when you wish.

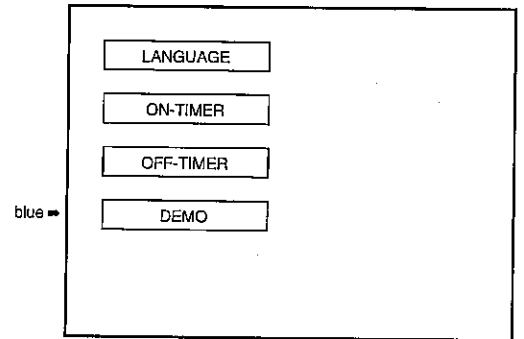


## Tuning menu

1. Press the MENU button ● to see the MAIN Menu.
2. Press the Cursor DOWN button ▼ to select «AUDIO».
3. Press the MENU button ● to see the INSTALLATION Menu.

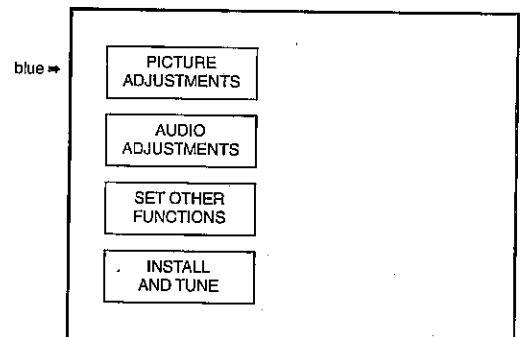


## Manual Channel Preset (PRESET USING REAL CHANNEL NUMBERS)


1. Press the MENU button ● to see the MAIN Menu.

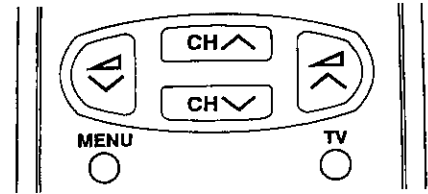

2. Press the Cursor UP button ▲ to select «INSTALL AND TUNE».

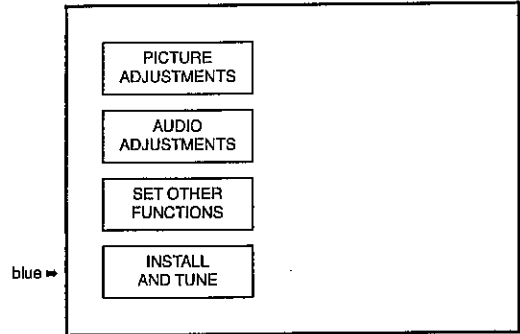

3. Press the MENU button ● to see the INSTALLATION Menu.

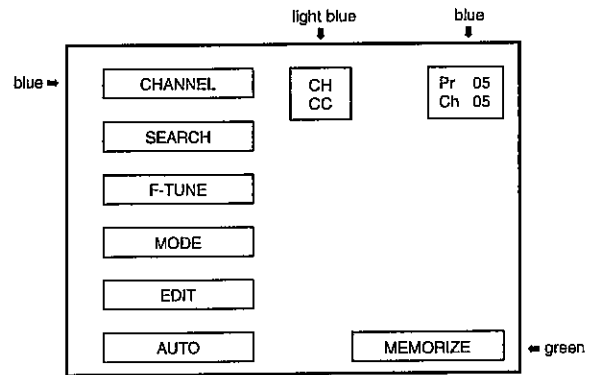

4. Press the Cursor RIGHT button ► to choose de CH/CC option.

5. Press the Cursor DOWN button ▼ to select Aerial(CH) or Cable(CC).



6. Press the real channel number you want to store with the 0~9 digit buttons.

7. Press green button to memorize.

8. Repeat the above procedure (4~7. steps) for presenting other programme channels.


9. Press the MENU button ● to close the TUNE Menu.

10. Press the TV button ● to clear the on-screen display.

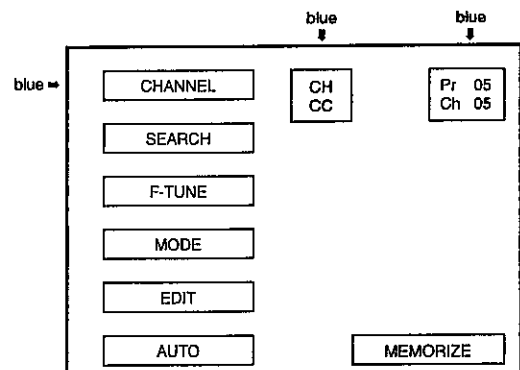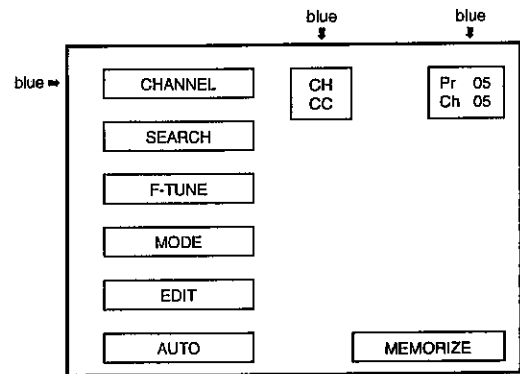


# Manual Channel Preset (PRESET USING FREQUENCY TUNING)


1. Press the MENU button ● to see the MAIN Menu.

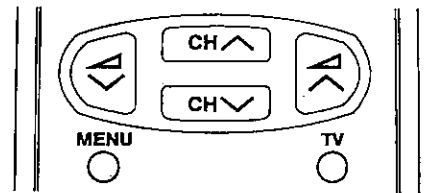

2. Press the Cursor UP button ▲ to select «INSTALL AND TUNE».

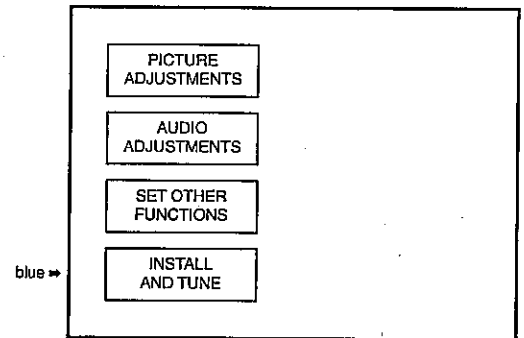

3. Press the MENU button ● to see the INSTALLATION Menu.

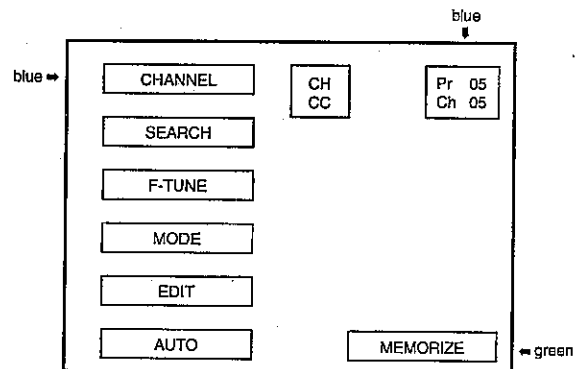

4. Press the Cursor RIGHT button ► to choose the CH/CC option.

5. Press the Cursor DOWN button ▼ to select Aerial(CH) or Cable(CC).

6. Press the Cursor RIGHT button ► to select CHANNEL.

7. Press the Cursor DOWN button ▼ to select SEARCH.


8. Press the Cursor LEFT/RIGHT buttons ◀/▶ to tune between the existing channel and the previous/next one.

9. Press GREEN button to memorize.

10. Repeat the above procedure (4.-9. steps) for presetting other programme channels.

11. Press the MENU button ● to close the TUNE Menu.

12. Press the TV button ● to clear the on-screen display.

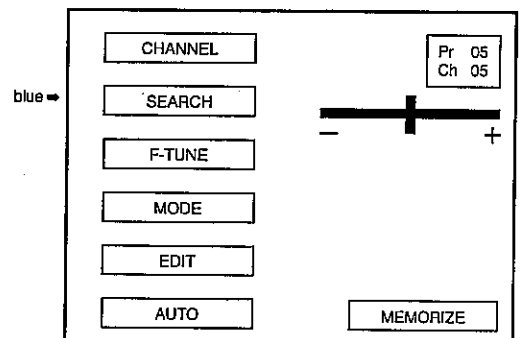





## After preset has been performed

The following features are available for preset channels:

### (A) Fine tuning

When a preset programme channel is not exactly tuned, you can fine tune the channel in this mode.


1. Select the programme channel number you want to tune using the 0~9 digit buttons or the channel selector (CH V / CH  $\wedge$ ) buttons.
2. Press the MENU button  $\bullet$  to see the MAIN Menu.
3. Press the Cursor UP button  $\blacktriangle$  to select «INSTALL AND TUNE».
4. Press the MENU button  $\bullet$  to see the INSTALLATION Menu.
5. Press the Cursor RIGHT button  $\blacktriangleright$  to open the TUNE Menu.
6. Press the Cursor DOWN button  $\blacktriangledown$  to select FINE TUNE. The red point mark indicate the selected parameter.
7. Adjust the picture with the Cursor LEFT/RIGHT buttons  $\blacktriangleleft$  /  $\blacktriangleright$  for the best picture quality.
8. Press GREEN button to memorize.
9. Press the MENU button to close the TUNE Menu.
10. Press the TV button  $\bullet$  to clear the on-screen display.
11. Repeat the above procedure for other programme channels as required.

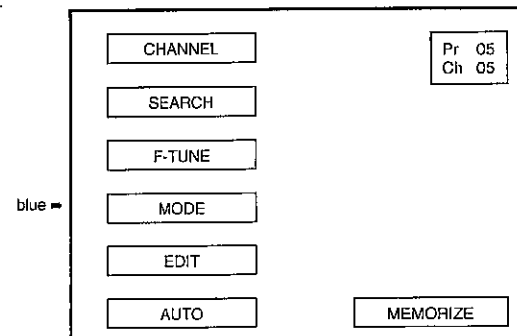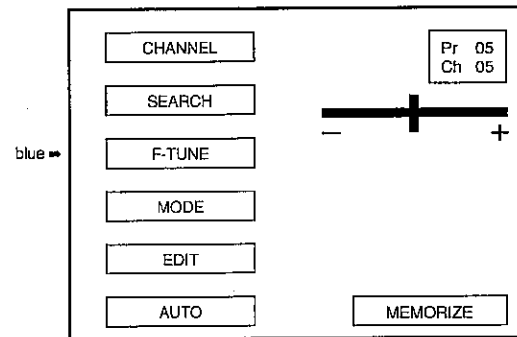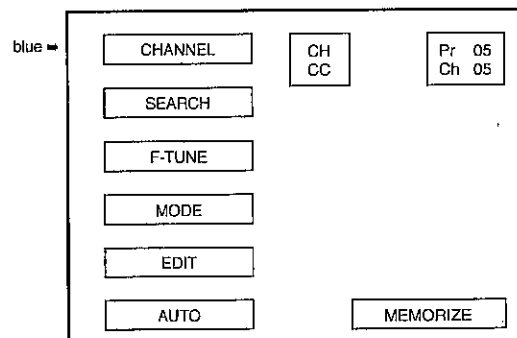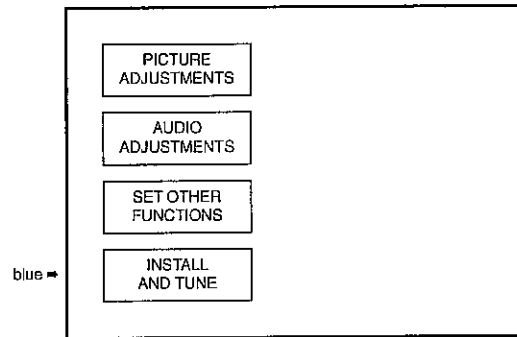

### (B) Mode

This feature allows you to select TV, VCR, SKIP. First follow the above steps 1., 2., 3. and 4. The INSTALLATION Menu will appear on screen.

5. Press the Cursor DOWN button  $\blacktriangledown$  twice to select MODE.
6. Press the Cursor RIGHT button  $\blacktriangleright$  to enter in MODE Menu.
7. With Cursor UP/DOWN buttons  $\blacktriangle$  /  $\blacktriangledown$  select:
  - TV:** If the TV signal is weak the image can shake. In this case put it in TV mode.
  - VCR:** In some case, the upper part of the picture may be distorted when receiving signal from a VCR via RF terminal on the TV set. This feature may improve the picture quality for this cases.
  - SKIP:** Allows you to SKIP channels you do not want to view when using channels selector (CHV/ CH  $\wedge$ ) buttons.
8. Press the MENU button  $\bullet$  to close the MODE Menu.
9. Press the TV button  $\bullet$  twice to clear the on-screen display.
10. Repeat the above procedure for other programme channels as required.

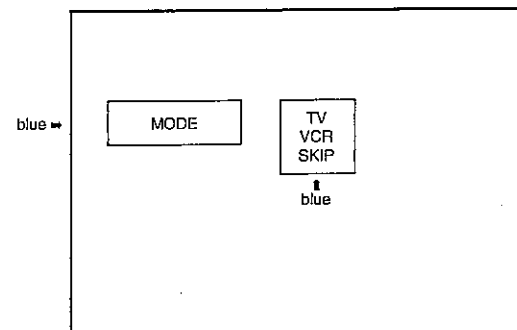

# TELETEXT Mode

## A What is Teletext?

Teletext is an information service, organized like a magazine, which is provided by some television stations in addition to regular television broadcasting. Your television receives special Teletext signals broadcast by a TV station, processes the information and displays it graphically on the screen. News, weather and sports information, stock exchange prices, program preview and closedcaptioning for the deaf are among the many services available through Teletext.


Teletext information is organized much like a magazine: according to pages and sub-pages. The basic unit of displayed information is the page. A sub-page is one of a series of pages.

Teletext reception is controlled by using the remote control. Refer to the appropriate button descriptions for operation of the Teletext functions.

## B Teletext features

Depending on the TV programme, every Teletext page is transmitted using a different system. Your SHARP TV is adjusted to receive two Teletext systems, namely TOP and FLOF, which are automatically identified by the receiver.

Common system in GERMANY is TOP but you can receive from satellite some FLOF TEXT transmissions. The user can easily identify them, by the manner in which they appear on the screen.

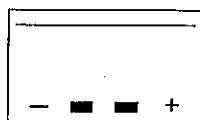



TOP



FLOF / LIST

## C To switch on and switch off the Teletext

Select a TV channel which is broadcasting the teletext programme you would like to watch. Then press the TEXT/MIX (  /  ) button to select the teletext mode. Press the TV button to go out from Teletext mode.

## Teletext Page memory List


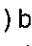
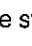
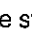
### D Operation...


#### LIST:

#### a) Come memorizzare una pagina

Your TV has 44 teletext page number memories for fast recall of teletext information. In programme positions 1 through 10, four teletext page numbers can be stored in each position; a total of 40 pages.


In programme positions 11 through 40, only one programme with 4 page numbers can be stored. If you try to store more than 4 page numbers in a programme position between 11 and 40, the previously stored page numbers will be erased. Select the programme channel number into which you want to store teletext page numbers.

1. Press the TEXT/MIX (  /  ) button to enter the teletext mode.
2. Press the LIST button to change from TOP or FLOF system to LIST mode.
3. Press a coloured button corresponding to the coloured brackets on the screen for page number storage.
4. Enter the teletext page number using the 0~9 digit buttons (enter three digits) or channel selector (CH V / CH A) buttons.
5. Repeat steps 2. through 4. until the numbers for the desired pages have been entered.
6. Press the store (  ) button to memorize the page numbers if you want. The symbol (  ) appears on the screen.
7. Press the TV button to exit the teletext mode.

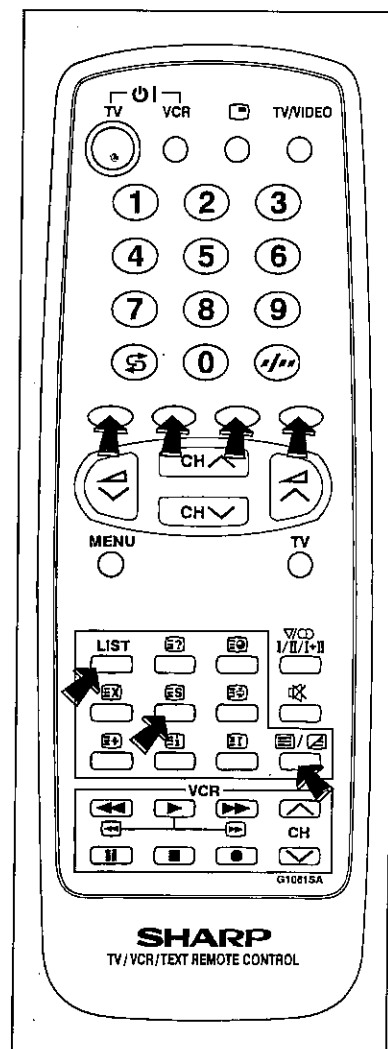

**SHARP**

TV / VCR / TEXT REMOTE CONTROL

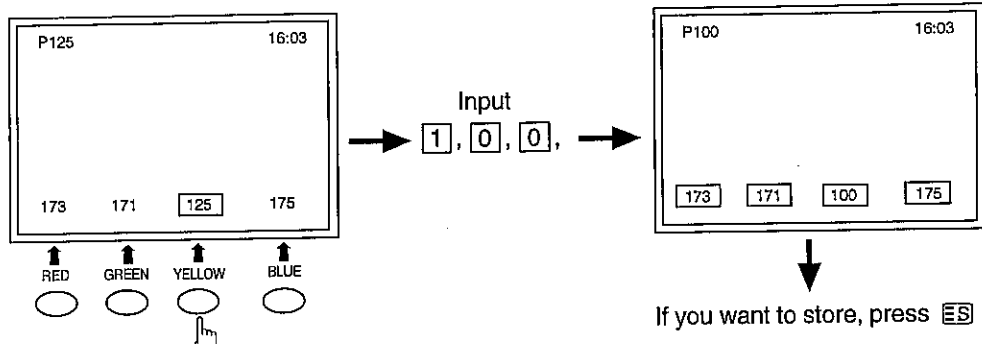

### b) Fast Page Selection

Select the appropriate programme channel.

Press the TEXT/MIX ( / ) button once to enter the teletext mode.

To recall a page number displayed in the coloured brackets, simply press the corresponding coloured button.

### c) 0~9 digit buttons

Enter a desired page number with the 0~9 digit buttons. (To select P.100: press 1, 0, 0).

### d) Page selector (UP/DOWN)

You can sequentially select page numbers by pressing the cursor UP/DOWN buttons  $\blacktriangle$  /  $\blacktriangledown$  or the (CH  $\wedge$  / CH  $\vee$ ) buttons (channel selector buttons in the TV mode).

### TOP

1. Using the coloured buttons, select the desired chapter.
2. The chapter selected contains a page with a new line of options.
3. Using the red button, you can select the previous page while with the blue button you can move on to the following page. These two buttons are shown on the screen by the signs - and +.

#### Note:

On entering the Teletext mode for the first time in one and the same programme with the TOP system, it will be necessary to wait approximately one minute for the TV to carry out the process of capturing the information.

## Other features common to the two systems

### (A) TEXT/MIX button ( / )

In TV mode: Press the TEXT/MIX button to enter the teletext mode.

In teletext mode: Press the TEXT/MIX to superimpose a teletext broadcast onto the current TV programme screen.

In mixed mode: Press the button a gain to return to the normal teletext screen.

### (B) Top/bottom/Full button

Each time you press the button, the upper/lower half of the teletext page is magnified and displayed on the screen.

### (C) Hold button

Any teletext page can be held on the screen by pressing the HOLD button.

Press the button again to cancel the hold mode.

### (D) Reveal button

Press this button to reveal hidden information such as the answer to a quiz.

Press the button again to hide the information.

**E Clock button** 

In TV mode: When the TV signal with TEXT data is received, and by pressing this button the real time information will appear on the top left area of the screen.

**F Cancel button** 

Used to switch the screen from teletext to regular TV broadcasting. The broadcasting channel being received by the TV will not change. A page number appears on the screen until the new screen is received. After the screen switches, the current teletext page number or sub-page number (if you have exited sub-page mode using the Cancel button), is displayed in the upper left of the screen.

**G Reset button** 

Press the reset button to return back to index page, and go out from Teletext mode.

**H LIST button**

Pressing this button you force the teletext to LIST Mode. It means that row 24 (bottom row of Teletext) will not have transmitter information, only the pages that user have previously stored in the memory.  
(More information on page 124 -Operation LIST-).

Pressing LIST button again we go out from LIST Mode and system is going to be identified again (TOP or FLOF).

**I INDEX button** 

Press the index button to return back to index page.



## 21-pin Euro-SCART and 21-pin Audio/Video



### REAR TV

#### RF Input

1. Antenna Terminal

#### 21-pin In/Out

2. 21-pin Euro SCART (Full connect, RGB)
3. 21- Audio/Video (AV-1)

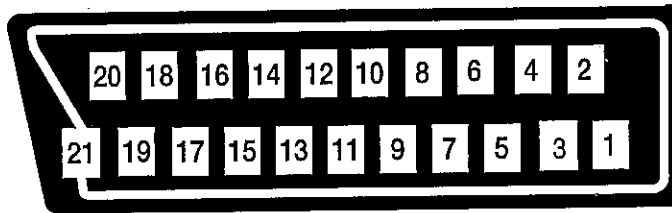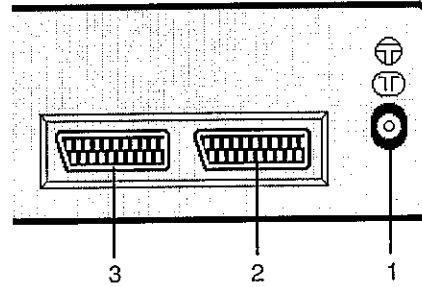

### 21-pin Euro-SCART (RGB)



- |                           |                        |                                      |
|---------------------------|------------------------|--------------------------------------|
| 1. Audio right output     | 8. Audio-video control | 15. Red input                        |
| 2. Audio right input      | 9. Earth for green     | 16. Red/Green/Blue control           |
| 3. Audio left output      | 10. Not used           | 17. Earth for video                  |
| 4. Common earth for audio | 11. Green input        | 18. Earth for Red/Green/Blue control |
| 5. Earth for blue         | 12. Not used           | 19. Video output                     |
| 6. Audio left input       | 13. Earth for red      | 20. Video input                      |
| 7. Blue input             | 14. Not used           | 21. Plug shield                      |

### 21-pin Audio/Video (AV-1)

- |                           |                        |                     |
|---------------------------|------------------------|---------------------|
| 1. Audio right output     | 8. Audio-video control | 15. Not used        |
| 2. Audio right input      | 9. Earth               | 16. Not used        |
| 3. Audio left output      | 10. Not used           | 17. Earth for video |
| 4. Common earth for audio | 11. Not used           | 18. Earth           |
| 5. Earth                  | 12. Not used           | 19. Video output    |
| 6. Audio left input       | 13. Earth              | 20. Video input     |
| 7. Not used               | 14. Not used           | 21. Plug shield     |

**Typical connection (Videorecorder/Decoder) through the 21-pin Euro-SCART**

Please refer to the operation manual of your VCR for details.

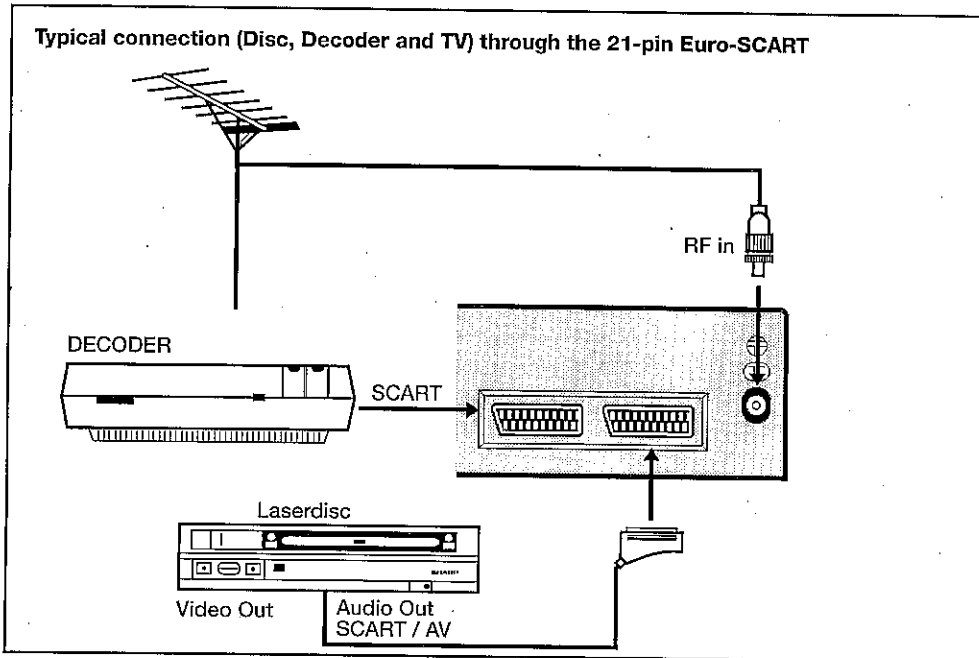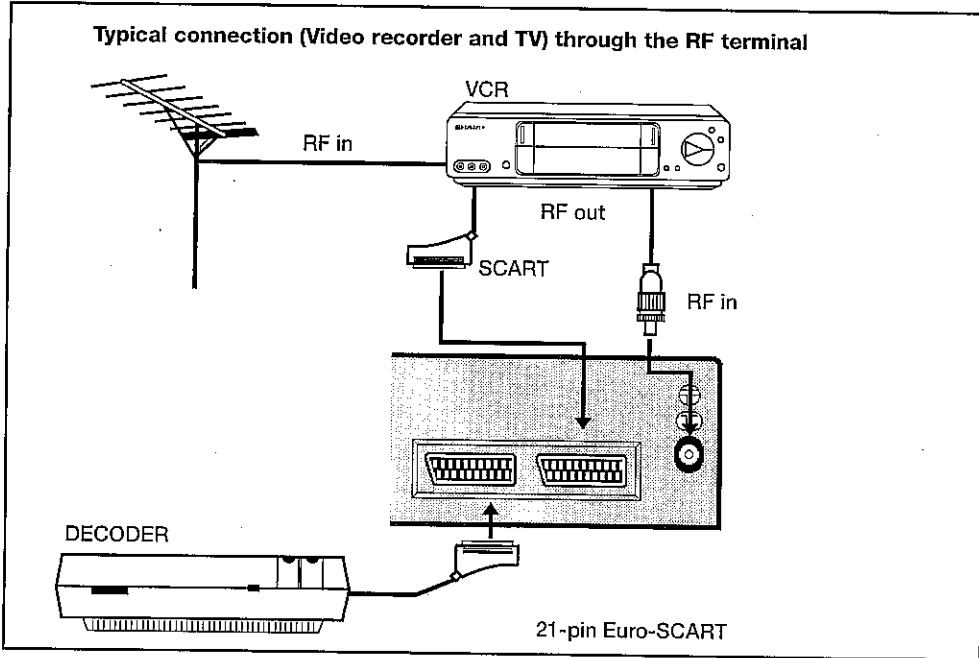

# Troubleshooting

The following conditions do not always denote trouble. Therefore, perform the checks described below before calling for service.

If the problem cannot be corrected by the use of this guide, pull the power plug out from the electrical outlet and call for service.

Problems	Possible Causes/Remedies											
	Try a new channel to check for possible station trouble	TV not plugged in Outlet power OFF	Main Power button of TV not ON	Antenna not connected to terminal at the back of the TV set	If outside antenna is used, check for broken wires	Check for local interference	Turn off using the Main Power button, then turn ON again after a minute	Adjust COLOUR control	Check batteries in the Remote Control	Try fine tuning to correct	Check if the Brightness or Contrast setting in the picture setting mode might be all the way to the minus side	Increase the volume
Remote control does not work		●	●				●		●			
Bars on screen					●	●						
Picture distorted	●				●					●		
Picture rolls vertically	●				●	●						
No colour	●			●	●		●			●		
Poor reception on some channels	●			●	●	●						
Picture weak	●			●	●		●			●		
Picture lines or streaks	●				●	●						
Picture ghosting	●			●	●	●						
Picture blurred	●				●					●		
Sound OK, picture poor	●			●	●	●		●		●	●	
Picture OK, sound poor	●					●						●
No picture or sound	●	●	●	●	●		●					

## General Specifications for Television Receiver

Item: IC Solid State Colour TV Receiver

**Models: 70DS-03S**

Chassis: CA-100 Chassis (IC & Transistorized Chassis)

1. Receiving Broadcast Standard		CCIR TV Standard system PAL B/G
2. Receiving Channel		VHF: E 2 - E 12 CH UHF: E 21 - E 69 CH HYPERBAND: S 1 - S 41 CC
3. Receiving System	Sound: Colour System: Field Frequency:	GERMAN STEREO (IGR) PAL PAL 50/60 Hz Capability
4. Power Source		220V-240V AC 50 Hz
5. Power Consumption at 240V AC 50Hz		90 Wh.
6. Power Consumption at (Stand-by)		3 W máx.
7. Audio Output (mpo)		10 + 10 W
8. Dimensions (Approx.)	width: height: depth:	740 m/m. 568 m/m. 470 m/m.
9. Viewing Area (diagonal measurement)		66 cm. (28")
10. Weight (Approx.)		31,5 Kg.
11. Internal speaker (Eliptic 2 pcs.)		6,5x13 cm.
12. Antenna Input Impedance		VHF/UHF 75 ohm Unbalanced
13. Safety		EN60065, CE - MARCK
14. EMC		EN55013, EN55020, CE - MARCK
15. Accessories & etc.		
a) User Instruction		Yes
b) Remote Control		Yes
c) Battery		2 pcs.
16. Other Feature		
a) Auto Installation System		
b) ASS function (Audio Channel Sorting System)		
c) 99 Channel Programming System		
d) Cable and Hyperband		
e) Multi Teletext		
f) OSD System (On Screen Display)		
g) Tint Control		
h) Stereo (IGR)		
i) ON-OFF Timer		
j) 21pin Euro SCART Conector (RGB) (EN50049-1)		
k) 21pin Audio/Video Conector (A/V-1)		
l) Head Phone Terminal		
m) Blue Back Noise Mute Function		

# **SHARP**

**SHARP ELECTRONICS (EUROPE) GmbH**

**Sonninstraße 3, 20097 Hamburg 1, Germany**

**SHARP ELECTRÓNICA ESPAÑA, S.A.**

**Polígono Industrial Can Sant Joan  
Sant Cugat del Vallés (Barcelona), Spain**



PRINTED IN SPAIN  
GEDRUCKT IN SPANIEN  
IMPRIMÉ EN ESPAGNE  
GEDRUKT IN SPANJE  
STAMPATO IN SPAGNA  
TINS-6482BMNO  
6/97